


Lighting Instructions (step illustrations are shown below)

1. Turn manual valve clockwise to “OFF” position.
2. Turn temperature dial to lowest setting.
3. Remove access doors. Wait 5 minutes to allow gas which may have accumulated in the burner compartment to escape. Smell around heater and at floor level to make sure there is no gas in the area.
4. Turn manual valve counter-clockwise to “PILOT” position.
5. Activate pilot lighting device supplied by appliance manufacturer, depress manual valve dial and light pilot.
6. After pilot lights, keep dial depressed for at least 30 seconds to properly heat the thermocouple and activate safety valves.
7. If pilot does not remain lit, wait at least 10 minutes and repeat steps 1-7.
8. After pilot is lit, replace access doors.
9. Turn manual valve counter-clockwise to “ON” position.
10. Turn temperature dial to the desired setting.


CAUTION: Hotter water increases the risk of scald injury.

Safety magnet


CONTROL “OFF”

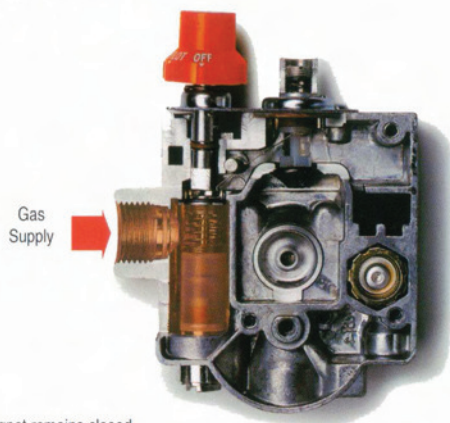

STEP 1 LIGHT PILOT THERMOCOUPLE HEATS UP

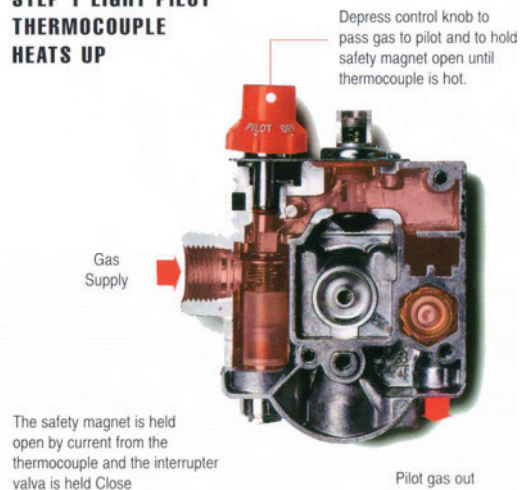

STEP 2 PILOT LIT HOLDING SAFETY VALVE HELD OPEN BY CURRENT FROM THERMOCOUPLE

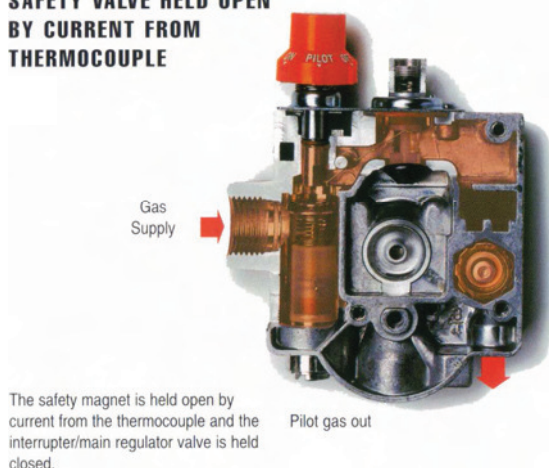

STEP 3 TURN UNITROL KNOB TURNED TO “ON” AND THERMOSTAT CALLING FOR HEAT.

