

READ CAREFULLY BEFORE INSTALLING APPLIANCE

TO BE INSTALLED AND SERVICED BY AUTHORISED PERSON ONLY.

DO NOT USE OR STORE FLAMMABLE MATERIALS NEAR THIS APPLIANCE.

APPROVED FOR OUTSIDE INSTALLATION ONLY AND MUST NOT BE ENCLOSED IN ANY WAY.

TO REMOVE COVER

LOOSEN TWO SCREWS LOCATED AT BOTTOM OF COVER. PULL COVER DOWN AND AWAY FROM WALL.

NOT SUITABLE AS A POOL HEATER.

TO REPLACE COVER

ENGAGE GUIDE CLIP ON COVER WITH BACK PANEL AND SLIDE TOP OF COVER UNDER FLUE. TIGHTEN BOTH SCREWS.

DO NOT PLACE ARTICLES ON OR AGAINST THIS APPLIANCE.

**IMPORTANT:
COVER MUST BE CLOSED
WHEN IN USE**

OPERATING INSTRUCTIONS

WATER WIZARD 600

Starting

▼ Press button fully and keep pressed.



After a few seconds press ignitor button

▲ Release button after approx. 10 secs.


If pilot flame is not alight, repeat ignition procedure.

Operation



▲ Press "ON" button.

Temperature control

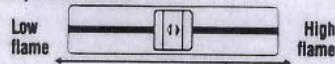

Turned anti-clockwise: more water - warm. Turned clockwise: less water - hot.

IMPORTANT

TURN HOT WATER TAP ON FULLY WHEN USING

Shutting-off

(if no hot water is to be drawn for a longer period of time)



▲ Press "OFF" button

WATER WIZARD 780 and 960

Commissioning

▼ Press button fully and keep pressed.



After a few seconds press ignitor button

▲ Release button after approx. 10 secs.

If pilot flame is not alight then, repeat ignition procedure.

Operation



▲ Press "ON" button (marked "000")

Shutting off

(if no hot water is to be drawn for a longer period of time)



▲ Press "OFF" button (marked "0")

WARNING

If the pilot light is extinguished, wait 5 minutes before attempting to relight the appliance.

When attempting to light the appliance ensure that all hot water taps are turned off.